

Jelcz

- [Jelcz 120M](#)
- [Jelcz M125M & M185M](#)

Jelcz 120M



1. Opening the first half of the first door
2. Emergency power switch
3. Handbrake
4. Tachometer
5. Engine off button
6. Fuel level indicator
7. Coolant temperature indicator
8. Voltage indicator

9. Oil pressure indicator
10. Air pressure indicator
11. Low air pressure indicator
12. Low oil pressure check
13. Battery indicator
14. Coolant temperature indicator
15. Prędkościomierz
16. Switch for hazard lights
17. Stacyjka
18. Combination switch for turn signals, wipers and main beam
19. Traffic lights control
20. Checking direction indicators
21. Fuel reserve check
22. Low air pressure indicator
23. Handbrake indicator
24. Retarder switch (not applicable to 120M / 3)
25. Transmission selector switch box (not applicable for 120M / 3)
26. Lighting switch for external direction boards
27. Three-stage light switch
28. Switch front fog light switch
29. Switch rear fog light switch
30. Driver cab lighting switch
31. Passenger area lighting switch
32. Scope passenger lighting switch
33. Stop brake switch
34. Blower switch on the front window
35. Heater switch
36. NZ stop call for door 1
37. Door NZ stop control indicator 2
38. Door NŻ stop indicator 3
39. Door opening and closing button 1
40. Door opening and closing button 2
41. Door opening and closing button 3
42. Door alarm button
43. Heating switch
44. Airflow control panel
45. Display driver

Jelcz M125M & M185M

Operating instructions

Instructions on how to operate this bus, can be seen on this video starting from **0:41**

<https://www.youtube.com/embed/AK0yHxJRKxM?start=41>

IBIS

PIN: 3296

Instructions on how to operate the IBIS can be seen on video starting from **1:55**