

# MAN New Lion's City

## Ticket printer

- Personel number: 21052
- PIN code: 15067

## Dashboard



- |   |  |
|---|--|
| 1 -Deactivate foot retarder   | 23 -Sensitivity adjustment rain sensor   |
| 2 Deactivate -ASR/ESP   | 24 -Retarder lever   |
| 3 -Deactivate start-stop  | 25 -Retarder Maximum level/Disable retarder  |
| 4 -Sun blind front windscreen   | 26 -Light rotary switch (level 0: light off, Level 1: Automatic mode; Level 2: Parking light; Level 3: Low beam; Level; 4: Fog light [if activated by setvar], otherwise Nebelschluss- |
| 5 -Unlocking the driver's door  | light; level 5: rear fog light)  |
| 6 -School driving circuit   | 27 -Gear selector rotary switch  |
| 7 -warning lights   | 28 -Press briefly = change between trip odometer and mileage tachometer; Press and hold: Reset trip odometer   |
| 8 Raise -driving level  | 29 -Switching the fuel gauge between diesel and Adblue tank  |
| 9 -Autokneeling   | 30 -Multi-function display   |
| 10 -Kneeling  | 31 -control indicators   |
| 11 -door sash lock  | 32 -Tachometer   |
| 12 -stop brake  | 33 -Tachometer   |
| 13 -Door Release (Not in 12C 2-Door)  | 34 -Fuel gauge   |
| 14 -driving workplace lighting (Level 1: Door 1 entrance lighting only in conjunction with parking lights or low beam; Stage 2: Driver's workplace lighting up to 3 km/h)                     | 35 -Cooling water temperature  |
| 15 -Night lighting  | 36 -supply pressure in brake circuit I   |
| 16 -Passenger compartment lighting  | 37 -supply pressure in brake circuit II  |
| 17 -Door button Door 1  | 38 -Digital tachograph   |
| 18 -Door button Door 2  | 39 -Heating control unit   |
| 19 -door button door 3 [Indicator and reset button for emergency stopcock only]; Door button, door 4 (not included in illustration) [Indicator and reset button for emergency stopcock only]. | 40 -outdoor temperature and mileage  |
| 20 -steering wheel adjustment   | 41 - Time and trip mileage or mileage tachometer   |
| 21 -combination lever   |  |
| 22 -windshield washer system (Level 0: off; level 1: rain sensor; level 2: interval slow; Level 3 Interval fast)  |  |

## Side area



- |  |   |
|--|---|
| 1 - Mirror adjustment (left/right)                                   | 6 - reverse warning system  |
| 2 - Selector switch of the mirror to be adjusted (left/centre/right) | 7 - Pedestal vent   |
| 3 - Adjustment of additional interior mirror                         | 8 - Deactivate external emergency stopcocks and reset emergency stopcocks |
| 4 - Deactivate hold request buzzer                                   | 9 - Roof hatch adjustment   |
| 5 - Side blind   | 10 - Light test   |


## Heating Control



- |   |   |
|---|---|
| 1 - Blower direction  | 7 - Heating/cooling (Dehumidifying the passenger compartment)   |
| 2 - Fan temperature   | 8 - Preheater   |
| 3 - Blower strength   | 9 - Driver climate (not available) Press and hold Activation of the ECO mode - air conditioner is deactivated |
| 4 - Weekday   | 10 - Recirculation mode   |
| 5 - Display   |   |
| 6 - Passenger compartment air conditioning Press and hold for temperature setting |   |

## Community findings about heating control

It seems it will target degree lower than you set it to (if I set it to 22C, it will target up to 21C)

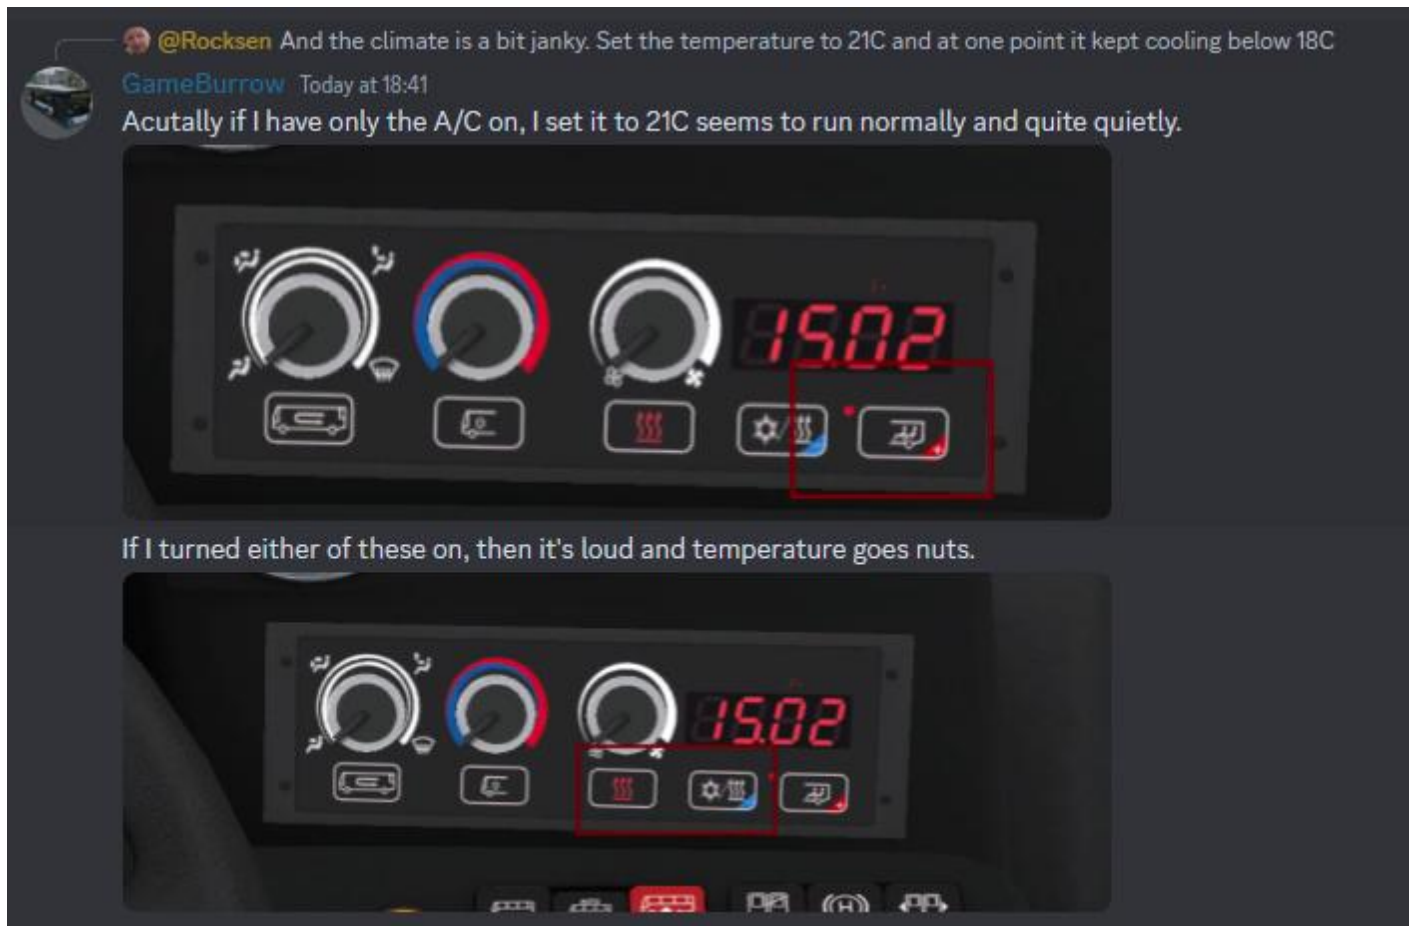

# Mirror adjustment

## Mirror adjustment

The vehicle has a working mirror adjustment (only to the right and to the left due to restrictions on the part of OMSI).

To do this, set switch 2 to the mirror to be adjusted and then move switch 1 in the corresponding direction.

To adjust the zoom mirror, switch 1 must be set to the centre position and switch 3 must also be activated.



# Translated readme

Original readme ran through DeepL translator:

<https://cloud.gameburrow.codes/s/mr62f8cdHRYKYPt>

---

Revision #3

Created 24 March 2023 21:10:30 by Gameburrow

Updated 29 March 2023 11:56:20 by Gameburrow