

MAN New Lion's City

Ticket printer

- Personel number: 21052
- PIN code: 15067

Dashboard



- | | |
|---|--|
| 1 -Deactivate foot retarder | 23 -Sensitivity adjustment rain sensor |
| 2 Deactivate -ASR/ESP | 24 -Retarder lever |
| 3 -Deactivate start-stop | 25 -Retarder Maximum level/Disable retarder |
| 4 -Sun blind front windscreen | 26 -Light rotary switch (level 0: light off, Level 1: Automatic mode; Level 2: Parking light; Level 3: Low beam; Level; 4: Fog light [if activated by setvar], otherwise Nebelschluss- |
| 5 -Unlocking the driver's door | light; level 5: rear fog light) |
| 6 -School driving circuit | 27 -Gear selector rotary switch |
| 7 -warning lights | 28 -Press briefly = change between trip odometer and mileage tachometer; Press and hold: Reset trip odometer |
| 8 Raise -driving level | 29 -Switching the fuel gauge between diesel and Adblue tank |
| 9 -Autokneeling | 30 -Multi-function display |
| 10 -Kneeling | 31 -control indicators |
| 11 -door sash lock | 32 -Tachometer |
| 12 -stop brake | 33 -Tachometer |
| 13 -Door Release (Not in 12C 2-Door) | 34 -Fuel gauge |
| 14 -driving workplace lighting (Level 1: Door 1 entrance lighting only in conjunction with parking lights or low beam; Stage 2: Driver's workplace lighting up to 3 km/h) | 35 -Cooling water temperature |
| 15 -Night lighting | 36 -supply pressure in brake circuit I |
| 16 -Passenger compartment lighting | 37 -supply pressure in brake circuit II |
| 17 -Door button Door 1 | 38 -Digital tachograph |
| 18 -Door button Door 2 | 39 -Heating control unit |
| 19 -door button door 3 [Indicator and reset button for emergency stopcock only]; Door button, door 4 (not included in illustration) [Indicator and reset button for emergency stopcock only]. | 40 -outdoor temperature and mileage |
| 20 -steering wheel adjustment | 41 - Time and trip mileage or mileage tachometer |
| 21 -combination lever | |
| 22 -windshield washer system (Level 0: off; level 1: rain sensor; level 2: interval slow; Level 3 Interval fast) | |

Side area



- | | |
|--|---|
| 1 - Mirror adjustment (left/right) | 6 - reverse warning system |
| 2 - Selector switch of the mirror to be adjusted (left/centre/right) | 7 - Pedestal vent |
| 3 - Adjustment of additional interior mirror | 8 - Deactivate external emergency stopcocks and reset emergency stopcocks |
| 4 - Deactivate hold request buzzer | 9 - Roof hatch adjustment |
| 5 - Side blind | 10 - Light test |


Heating Control



- | | |
|---|---|
| 1 - Blower direction | 7 - Heating/cooling (Dehumidifying the passenger compartment) |
| 2 - Fan temperature | 8 - Preheater |
| 3 - Blower strength | 9 - Driver climate (not available) Press and hold Activation of the ECO mode - air conditioner is deactivated |
| 4 - Weekday | 10 - Recirculation mode |
| 5 - Display | |
| 6 - Passenger compartment air conditioning Press and hold for temperature setting | |

Community findings about heating control

It seems it will target degree lower than you set it to (if I set it to 22C, it will target up to 21C)

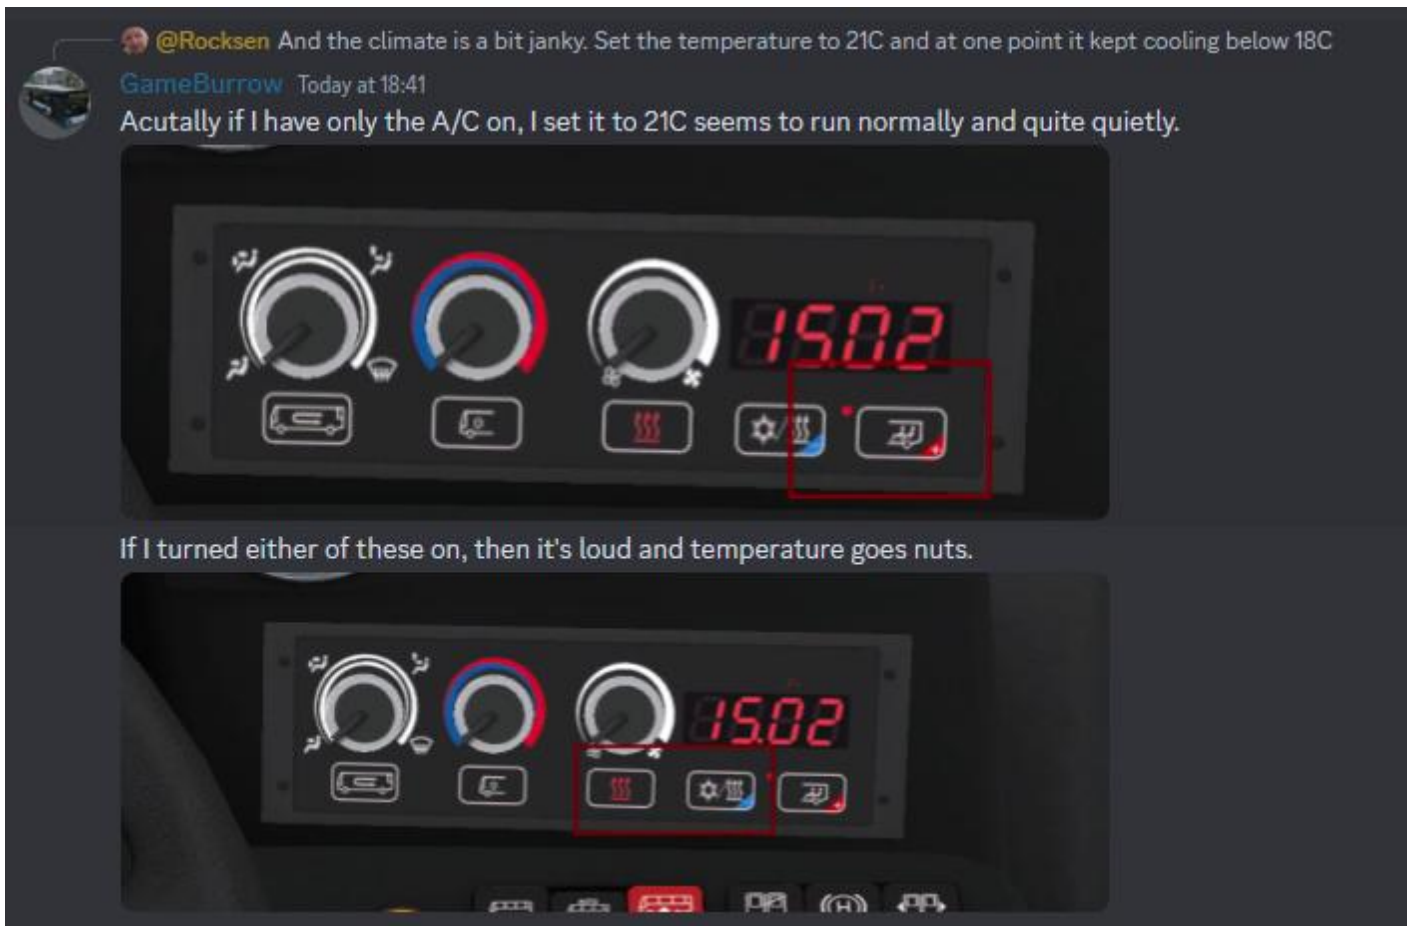

Mirror adjustment

Mirror adjustment

The vehicle has a working mirror adjustment (only to the right and to the left due to restrictions on the part of OMSI).

To do this, set switch 2 to the mirror to be adjusted and then move switch 1 in the corresponding direction.

To adjust the zoom mirror, switch 1 must be set to the centre position and switch 3 must also be activated.



Translated readme

Original readme ran through DeepL translator:

<https://cloud.gameburrow.codes/s/mr62f8cdHRYKYPt>

Revision #3

Created 24 March 2023 21:10:30 by Gameburrow

Updated 29 March 2023 11:56:20 by Gameburrow